

DYNAMIC ENGINEERING

150 DuBois St. Suite B/C, Santa Cruz CA 95060

831-457-8891


<https://www.dyneng.com> sales@dyneng.com

Est. 1988

User Manual

PCIBPMC

PCI 1 Position PMC Compatible Carrier

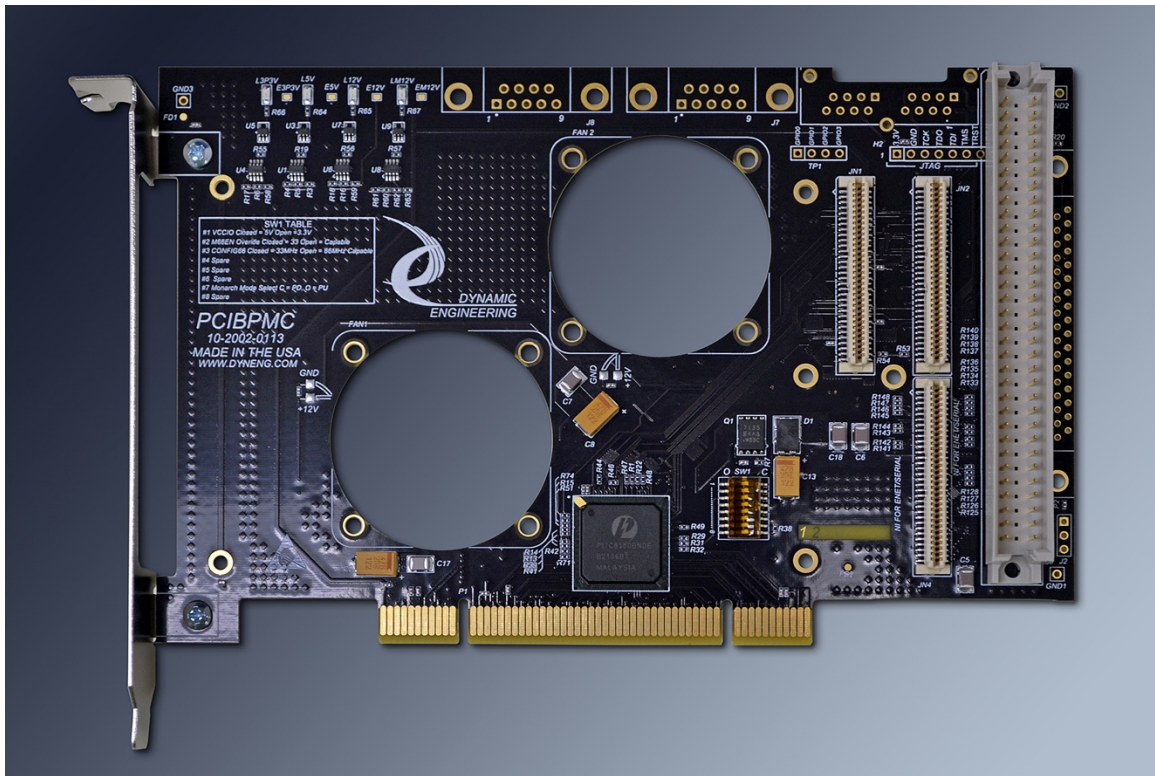

Revision 9p2

Corresponding Hardware: Revision 13

Fab number 10-2002-0113

PCIBPMC
PCI and PMC Compatible Carrier

Dynamic Engineering
150 DuBois St. Suite B/C
Santa Cruz, CA 95060
831-457-8891

©2002-2022 by Dynamic Engineering.
Other trademarks and registered trademarks are owned by their
respective manufactures.
Revised 05/05/22

This document contains information of proprietary interest to Dynamic Engineering. It has been supplied in confidence and the recipient, by accepting this material, agrees that the subject matter will not be copied or reproduced, in whole or in part, nor its contents revealed in any manner or to any person except to meet the purpose for which it was delivered.

Dynamic Engineering has made every effort to ensure that this manual is accurate and complete. Still, the company reserves the right to make improvements or changes in the product described in this document at any time and without notice. Furthermore, Dynamic Engineering assumes no liability arising out of the application or use of the device described herein.

The electronic equipment described herein generates, uses, and can radiate radio frequency energy. Operation of this equipment in a residential area is likely to cause radio interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

Dynamic Engineering's products are not authorized for use as critical components in life support devices or systems without the express written approval of the president of Dynamic Engineering.

Connection of incompatible hardware is likely to cause serious damage.



Table of Contents

PRODUCT DESCRIPTION	5
DipSwitch Settings	7
Other Notes:	8
Reserved Pins Routing	8
PMC Module Backplane IO Interface Pin Assignment	9
PMC Module Pn4 Ethernet and Serial Pin Assignment	10
APPLICATIONS GUIDE	11
Interfacing	11
Construction and Reliability	12
Thermal Considerations	12
WARRANTY AND REPAIR	13
Service Policy	13
Out of Warranty Repairs	13
For Service Contact:	13
SPECIFICATIONS	14
ORDER INFORMATION	15

List of Figures

FIGURE 1	PCIBPMC PN4 INTERFACE STANDARD	9
FIGURE 2	PCIBPMC PN4 ETHERNET , SERIAL	10

Product Description

PCIBPMC is part of the Dynamic Engineering PCI and PMC Compatible family of modular I/O components. The PCIBPMC adapts one PMC to one PCI slot.

Special features:

- Universal PCI 1/2 length card.
- Voltage checking for 12V, -12V, 5V, 3.3V with corresponding LEDs illuminated when in tolerance.
- High capacity low thermal rise planes for PMC voltages. Full PCI capability routed to PMC position
- User selectable secondary VIO.
- 32 bit operation
- 66 or 33 MHz operation. With 66 MHz. primary bus speed the secondary bus can be 66 or 33 MHz. Secondary bus can't be at a higher rate than the primary bus.
- Front panel connector access through PCI bracket
- User IO [Pn4] available through one of two cable connectors (DIN IDC or SCSI II compatible) Spare pins on SCSI connector can be set to power or ground.
- Cooling cutouts for increased airflow to PMC
- Optional Fan(s) to increased airflow
- Optional Ethernet connectors to support PMCs with Ethernet
- Optional Serial Port connectors to support PMCs with Serial Ports
- Optional JTAG programming support

PCIBPMC is ready to use with the default settings. Just install the PMC onto PCIBPMC and then into the system. There are a few settings to optimize performance.

PCIBPMC is bridged, isolating the PMC from the PCI bus. PCI connections are specification compliant on the PCIBPMC. PCIBPMC can be used in multiple slots on the same PCI bus segment. The bridged design has pipeline delays between the primary and PMC buses. The bridged design has independent VIO definitions between the PMC and the primary bus.

PCIBPMC features two cooling cutouts designed to support the addition of a fan in one or two positions. On PrPMCs, and other PMCs with high thermal loads the fan option is a good idea. On cards with a lower thermal profile the fan is not needed. The "Zero Slot Fan's" produce 5 CFM each in a small area to create a high LFM rating suitable for most cooling requirements. For even more cooling power the full profile rear mount FAN option can be selected "R". The fan used



has a relatively low noise rating for quiet operation. Position 1 is closest to the PCI bezel and position 2 is closer to the PMC connectors.

Zero Slot Fan's are low profile and PMC height legal while remaining PCI legal.

Some PMCs support Ethernet connections over the Pn4 connector with pins specified by the PICMG standard 2.15. PCIBPMC supports Ethernet capable cards with an optional two position RJ45 connector on the top edge of the card.

Some PMCs support serial channels on Pn4 with pins specified by PICMG standard 2.15. PCIBPMC supports serial capable cards with an optional pair of DB9F connectors on the top edge of the card.

PCIBPMC has two options for Pn4 signal routing. The VME style 2x32 pin header or a SCSI style connector.

Please see our website for more information about PCIBPMC and other carriers for IP Modules, PMC, XMC, and PCI-104 in various form factors including PCI, PCIe, VPX, PCI-104.

DipSwitch Settings

Please note that the switch numbering and '1' and '0' definitions are per the silk screen.

All Settings are performed on SW1. There are 8 individual switches within SW1. SW1.1 refers to switch 1 on SW1. Other than the Monarch selection all switches are '0' when closed (marked "on" on the switch) and '1' when open. Signal names provided to allow looking up in the bridge data sheet.

Select the appropriate VIO for your PMC. A PMC can be 3.3V or 5V or "universal". Please select the 3.3 or 5V VIO choice with the shunt **SW1.1**. The Voltage choices are marked. Open for 3.3V operation; closed for 5V operation. If the PMC is universal PCI voltage, 3.3V is recommended for lower power consumption.

Select the secondary side [PMC] PCI bus frequency. The options are to use the PCI bus speed [primary] or to force 33 MHz on the secondary side. The PMC to be installed must be 66 MHz compliant to use the 66 MHz secondary side option. The speed is controlled with the **SW1.2** Open = 66 MHz capable secondary side. Closed = force to 33 MHz. **SM66EN** is the signal name controlled by the switch. Please note: in the open position, the PMC can still pull this signal down to force 33 MHz operation.

Select the Bridge capability to run at 66 MHz. The bridge is 66 MHz capable and should be selected to operate in that mode with **SW1.3** in the open position. **CONFIG66** is the signal controlled. Closing the switch forces to 33 MHz.

The "**Monarch**" signal to the PMC is controlled with **SW1.7** When Closed the signal is pulled down to ground through a 10K resistor to allow the PMC to drive high if needed. When open the signal is pulled up with a 4.7K ohm resistor to 3.3V.

Other Notes:

Interrupts from the PMC are connected from the PMC to the primary PCI bus. INTA through INTD are mapped directly to the primary bus segment.

IDSEL is AD20 [secondary PCI].

The PCI reserved signals are routed to the PMC reserved pins in accordance with the PMC specification to allow for future signal definitions or special user signaling.

Reserved Pins Routing

<u>PCI</u>	<u>PMC</u>
A9	Pn2-8
B10	Pn2-9
A11	Pn2-10
B14	Pn1-10
A40	Pn1-41
A41	Pn1-42

Jumper and switch options are clearly marked in the component side silk screen.

PMC Module Backplane IO Interface Pin Assignment

The figure below gives the pin assignments for the PMC Module IO Interface – from Pn4 to the PCIBPMC connectors. Also see the User Manual for your PMC board for more information. Please note that P2 or P3 is installed not both.

DIN IDC [P3]		SCSI II [P2]		Pn4	
C1	A1	1	35	1	2
C2	A2	2	36	3	4
C3	A3	3	37	5	6
C4	A4	4	38	7	8
C5	A5	5	39	9	10
C6	A6	6	40	11	12
C7	A7	7	41	13	14
C8	A8	8	42	15	16
C9	A9	9	43	17	18
C10	A10	10	44	19	20
C11	A11	11	45	21	22
C12	A12	12	46	23	24
C13	A13	13	47	25	26
C14	A14	14	48	27	28
C15	A15	15	49	29	30
C16	A16	16	50	31	32
C17	A17	17	51	33	34
C18	A18	18	52	35	36
C19	A19	19	53	37	38
C20	A20	20	54	39	40
C21	A21	21	55	41	42
C22	A22	22	56	43	44
C23	A23	23	57	45	46
C24	A24	24	58	47	48
C25	A25	25	59	49	50
C26	A26	26	60	51	52
C27	A27	27	61	53	54
C28	A28	28	62	55	56
C29	A29	29	63	57	58
C30	A30	30	64	59	60
C31	A31	31	65	61	62
C32	A32	32	66	63	64
		33	67	Open, +5 or GND via J2 silk screen defined	
		34	68	Open, +5 or GND via J3	

FIGURE 1

PCIBPMC PN4 INTERFACE STANDARD

Read table:

P3-C1 = P2-1 = Pn4-1

P3-A1 = P2-35 = Pn4-2

etc.

PMC Module Pn4 Ethernet and Serial Pin Assignment

Ethernet[J6]		Serial[J7,J8]	Pn4	
11	14		1	2
12	15		3	4
			5	6
13	17		7	8
16	18		9	10
			11	12
21	24		13	14
22	25		15	16
			17	18
23	27		19	20
26	28		21	22
			23	24
			25	26
		13	27	28
		23	29	30
			31	32
		12	33	34
		22	35	36
			37	38
			39	40
			41	42
			43	44
			45	46
			47	48
			49	50
			51	52
			53	54
			55	56
			57	58
			59	60
			61	62
			63	64

FIGURE 2

PCIBPMC PN4 ETHERNET , SERIAL

The port number is shown then the pin number. On the ethernet connector J6, there are two RJ45 connectors. Port 1 pin 1 is tied to Pn4 pin 1, Port 2 pin 8 is tied to pin 22 of Pn4.

Applications Guide

Interfacing

Some general interfacing guidelines are presented below. Do not hesitate to contact the factory if you need more assistance.

Installation

The PMC is mounted to the PCIBPMC prior to installation within the chassis. For best results: with the PCI bracket installed, install the PMC at an angle so that the PMC front panel bezel penetrates the PCI bracket then rotate down to mate with the PMC [PnX] connectors.

There are four mounting locations. Two into the PMC mounting bezel, and two for the standoffs near the PMC bus connectors.

Start-up

Make sure that the "system" can see your hardware before trying to access it. Many BIOS will display the PCI devices found at boot up on a "splash screen" with the VendorID and CardId for the PMC installed and an interrupt level. If the information is not available from the BIOS then a third party PCI device cataloging tool will be helpful

Watch the system grounds. All electrically connected equipment should have a fail-safe common ground that is large enough to handle all current loads without affecting noise immunity. Power supplies and power consuming loads should all have their own ground wires back to a common point.

Power all system power supplies from one switch. Connecting external voltage to the PCIBPMC when it is not powered can damage it, as well as the rest of the host system. This problem may be avoided by turning all power supplies on and off at the same time. This applies more to the PMC installed into the PCIBPMC than the PCIBPMC itself, and it is smart system design when it can be achieved.



Construction and Reliability

The PCIBPMC is constructed out of 0.062 inch thick high temperature FR4 material. A cooling cutout has been designed into the product for improved air flow to the PMC. The components on PCIBPMC are tied into the internal power planes to spread the dissipated heat out over a larger area. This is an effective cooling technique in the situation where a large portion of the board has little or no power dissipation.

A fan option is available for high thermal load PMC's or for chassis with a lack of air circulation.

Surface mounted components are used. The connectors are SMT for the PMC bus and through hole for the IO.

The PMC Module connectors are keyed and shrouded with Gold plated pins on both plugs and receptacles. They are rated at 1 Amp per pin, 100 insertion cycles minimum. These connectors make consistent, correct insertion easy and reliable.

The PMC Module is secured against the carrier with the PMC connectors. It is recommended, for enhanced security against vibration, that the PMC mounting screws are installed. The screws are supplied with the PMC from the OEM. Dynamic Engineering has screws, standoffs, blank bezels and other PMC hardware available at a reasonable cost if your PMC was not shipped with some of the required attachment hardware or if it has been misplaced.

Thermal Considerations

If the PMC installed has a large heat dissipation, forced air cooling is recommended.

Warranty and Repair

Please refer to the warranty page on our website for the current warranty offered and options.

<https://www.dyneng.com/warranty.html>

Service Policy

Before returning a product for repair, verify as well as possible that the suspected unit is at fault. Then call the Customer Service Department for a RETURN MATERIAL AUTHORIZATION (RMA) number. Carefully package the unit, in the original shipping carton if this is available, and ship prepaid and insured with the RMA number clearly written on the outside of the package. Include a return address and the telephone number of a technical contact. For out-of-warranty repairs, a purchase order for repair charges must accompany the return. Dynamic Engineering will not be responsible for damages due to improper packaging of returned items. For service on Dynamic Engineering Products not purchased directly from Dynamic Engineering contact your reseller. Products returned to Dynamic Engineering for repair by other than the original customer will be treated as out-of-warranty.

Out of Warranty Repairs

Out of warranty repairs will be billed on a material and labor basis. Customer approval will be obtained before repairing any item if the repair charges will exceed one half of the quantity one list price for that unit. Return transportation and insurance will be billed as part of the repair and is in addition to the minimum charge.

For Service Contact:

Customer Service Department
Dynamic Engineering
150 DuBois St. Suite B/C
Santa Cruz, CA 95060
831-457-8891
InterNet Address support@dyneng.com



Specifications

Logic Interfaces:	PCI Interface 33/32 ⇔ 66/32
Access types:	PCI bus accesses
CLK rates supported:	33 or 66 MHz PCI clock rates
Software Interface:	transparent Bridge. 21154 compatible registers in configuration space
Initialization:	switch selections for VIO, primary and secondary clock rates and cable options
Interface:	PMC front bezel via PCI bracket and User IO connector via DIN ribbon and or SCSI II connector
Dimensions:	1/2 length PCI board.
Construction:	High Temp FR4 Multi-Layer Printed Circuit, Through Hole and Surface Mount Components.

Order Information

standard temperature range -40-85°C

PCIBPMC	short PCI card w/ PMC position, DIN connector https://www.dyneng.com/PCIBPMC.html -FAN1/2 [fan installed in position 1 and/or 2] -SER [serial ports installed] -ENET [ethernet connectors installed] -JTAG add JTAG headers -CC add conformal coating -ROHS add ROHS processing -NC no connector option -SCSI add SCSI connector -VIO3 force VIO to 3.3 on secondary side
HDEterm68	https://www.dyneng.com/HDEterm68.html 68 pin SCSI II to 68 screw terminal converter with DIN rail mounting.
HDEcabl68	SCSI cables with latch blocks or thumbscrews in various standard lengths plus custom. https://www.dyneng.com/HDEcabl68.html
DINterm64	64 position ribbon cable to terminal strip adapter. https://www.dyneng.com/DINterm64.html
DINribn64	64 position ribbon cable to interconnect PCIBPMC and DINterm64. https://www.dyneng.com/DINribn64.html

All information provided is Copyright Dynamic Engineering